



**Example 11: NAC STROBES ACTIVATED SEPERATELY, with all circuits synchronized**

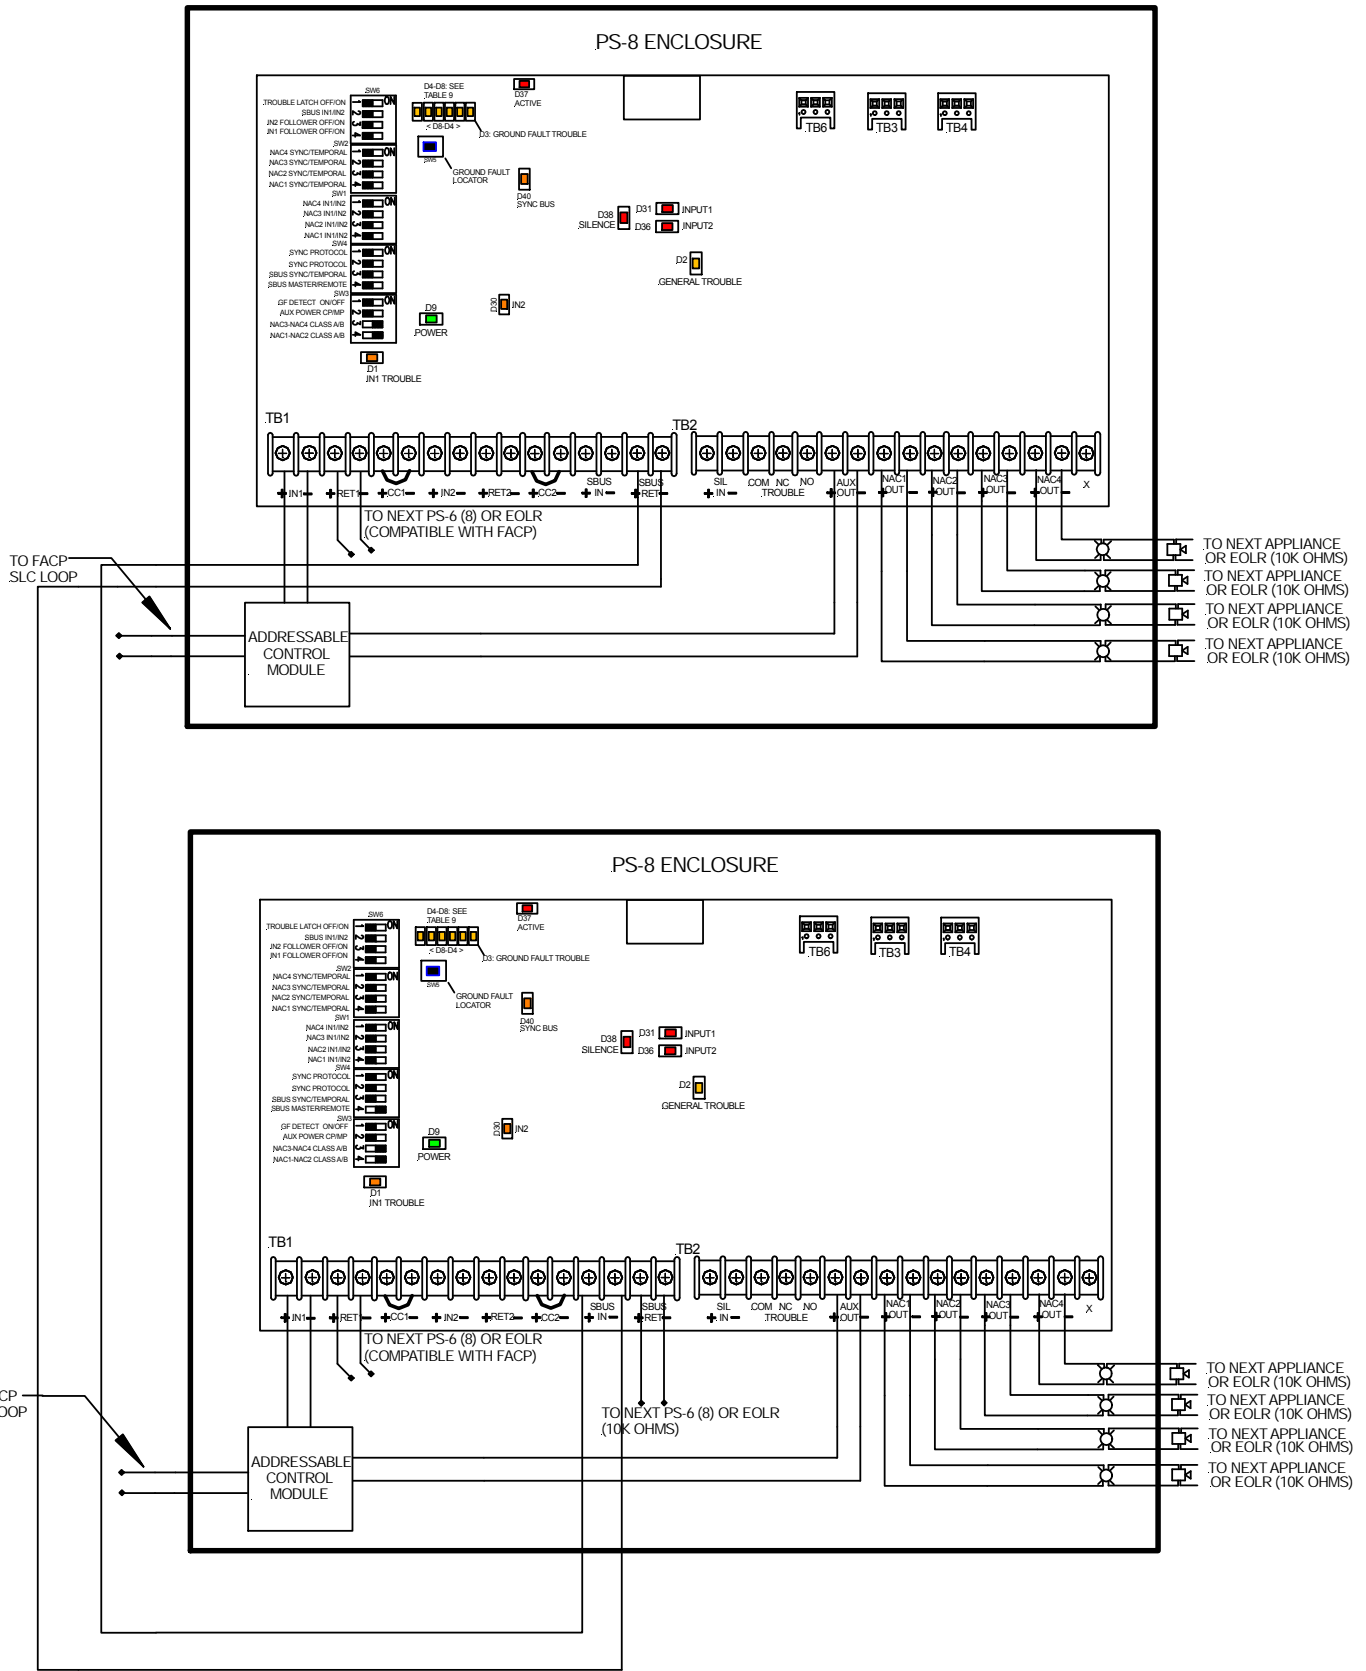

**Example 12: NAC HORNS ACTIVATED SEPARATELY, with all circuits synchronized**

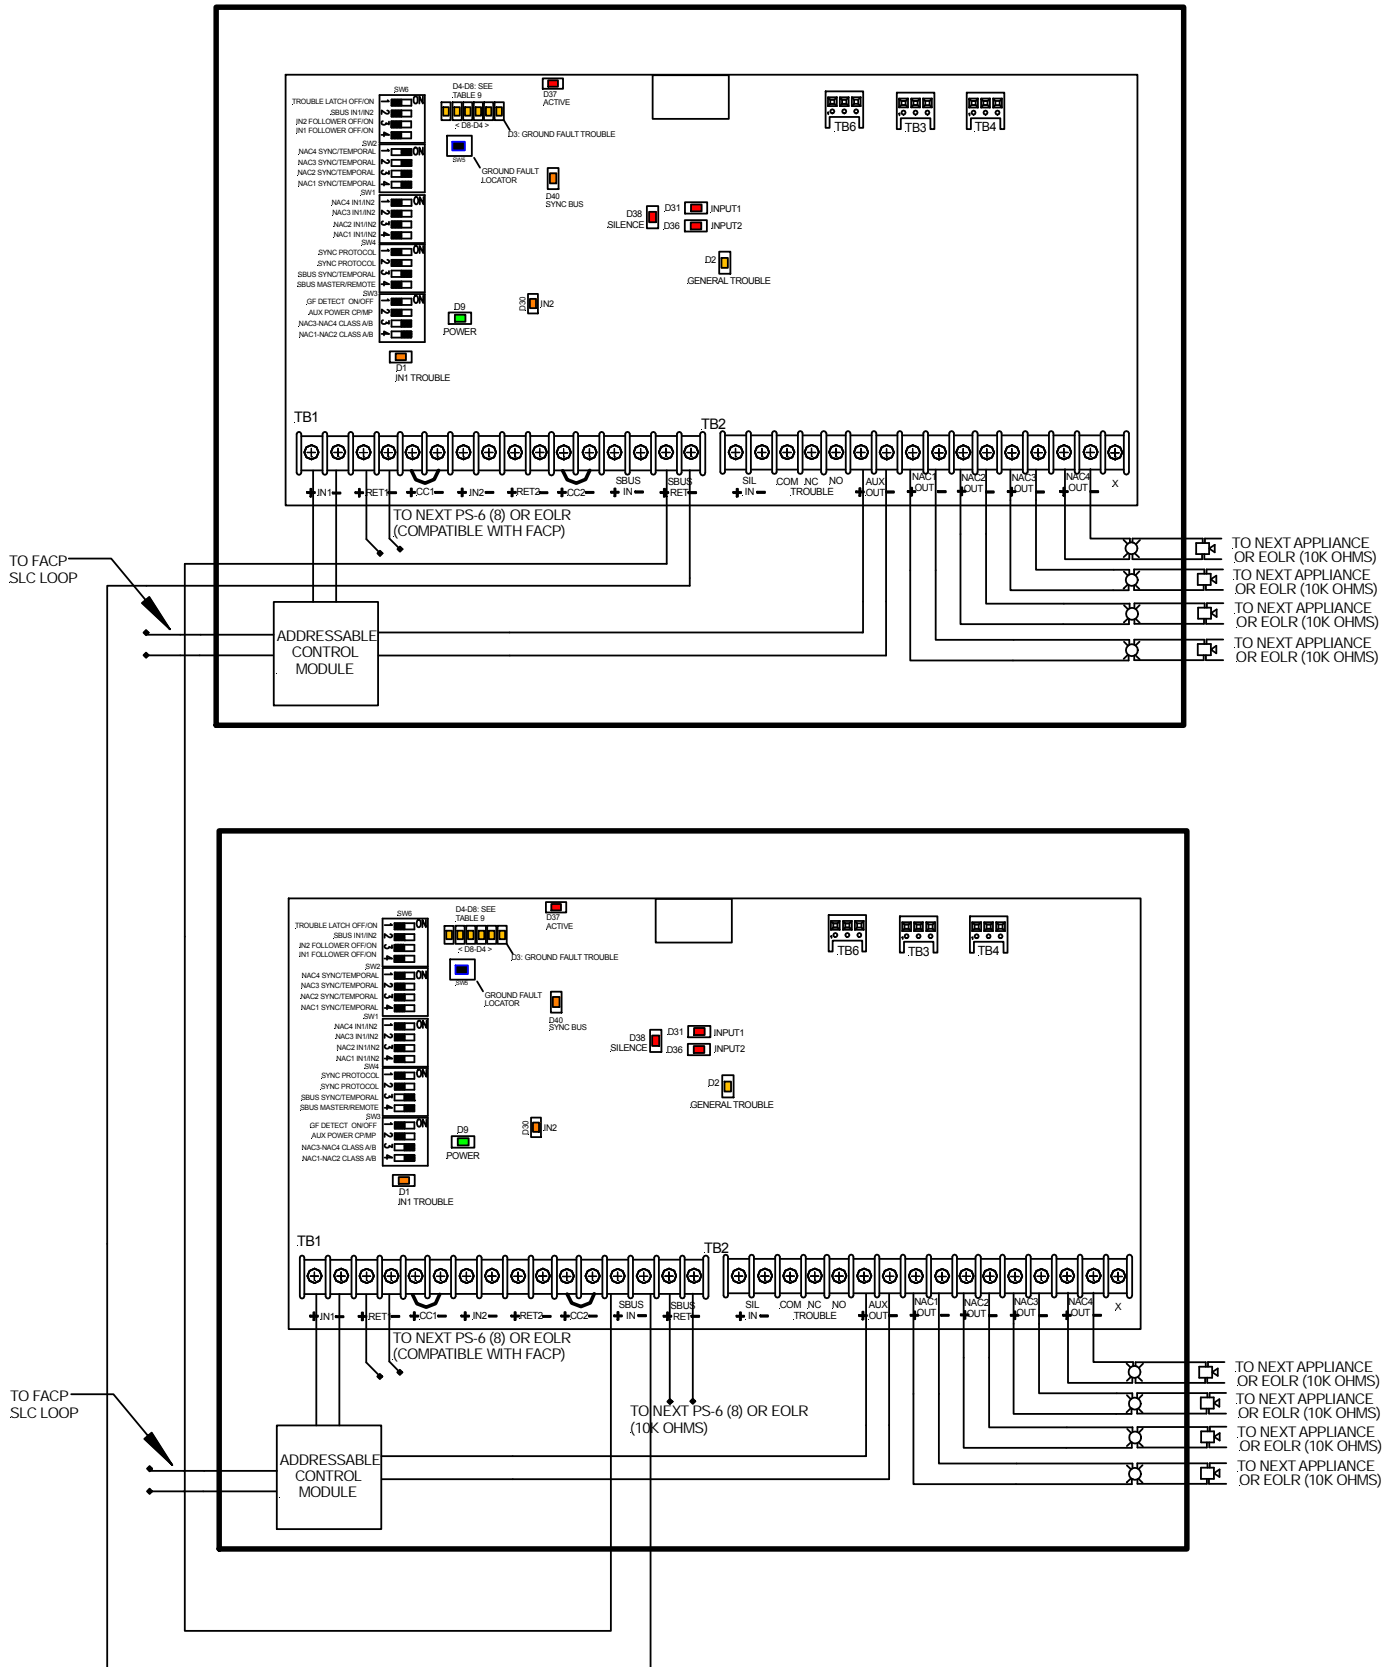

### Example 13: NAC APPLIANCES SYNCHRONIZED all at the same time

